

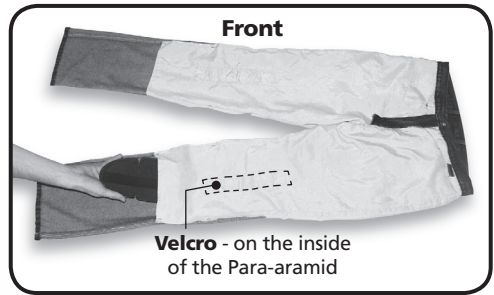
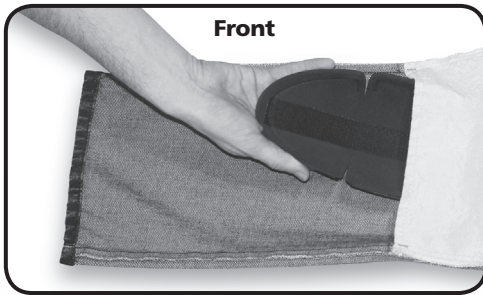


How to fit armour


to original range **K7, ND4, H2, Army Green and Camo Jeans**

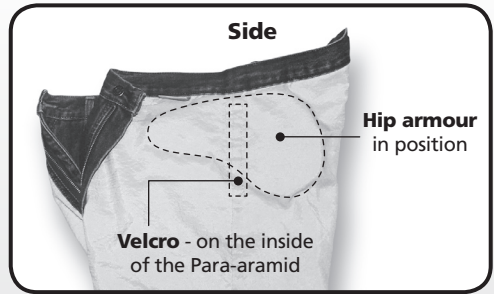

To insert the knee armour, first turn the jean inside out. Simply slide the knee armour between the woven Para-aramid and the outer jean fabric and Velcro into place. The knee armour can be adjusted up and down on the Velcro into the correct position.

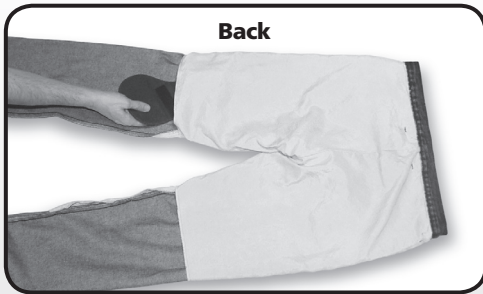

To insert the hip armour, slide the armour up from the back in between the woven Para-aramid and the outer jean fabric. Match the Velcro on the armour to the Velcro sewn onto the inside of the Para-aramid and Velcro into place. The hip armour should be positioned as high as possible just under the waistband with the small curve of the armour facing the zip.

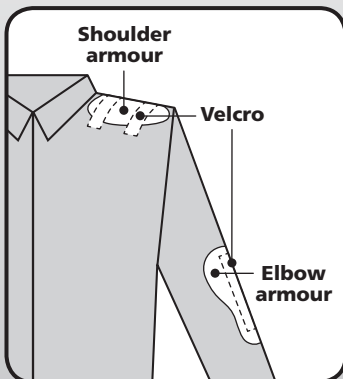

How to fit armour to K7 Jacket

To insert the shoulder armour, The shoulder armour simply Velcro's onto the Para-aramid. It is best to position the armour slightly forward as shown in the diagram.

To insert the elbow armour, first turn the jacket inside out. Slide the armour up between the Para-aramid and the denim, then Velcro into place. The armour can be adjusted up and down by using the Velcro.

KNOX® CE Approved armour is recommended for all Hood original range Jeans and Jackets.

Call **01953 861166** or email **sales@hoodjeans.co.uk**